

Montageanleitung/Mounting instructions (german and english)



FC-Moto Seitenkoffer Set – Montage mit GIVI Adapter Typ B an GIVI Seitenträger

Geliefert wird: FC-Moto Seitenkoffer links & rechts mit beigelegten GIVI Adaptern Typ B links & rechts zur Montage an den Haltepunkten der FC-Moto Seitenkoffer zugesendet.

Zur Montage der FC-Moto Koffer an das vorhandene GIVI PLOxxxxCAM Seitenträgersystem, muss folgendes beachtet werden:

Schritt 1:

Seitenkofferträger bei Bedarf vom Motorrad demontieren und das markierte GIVI-Klicksystem entfernen.

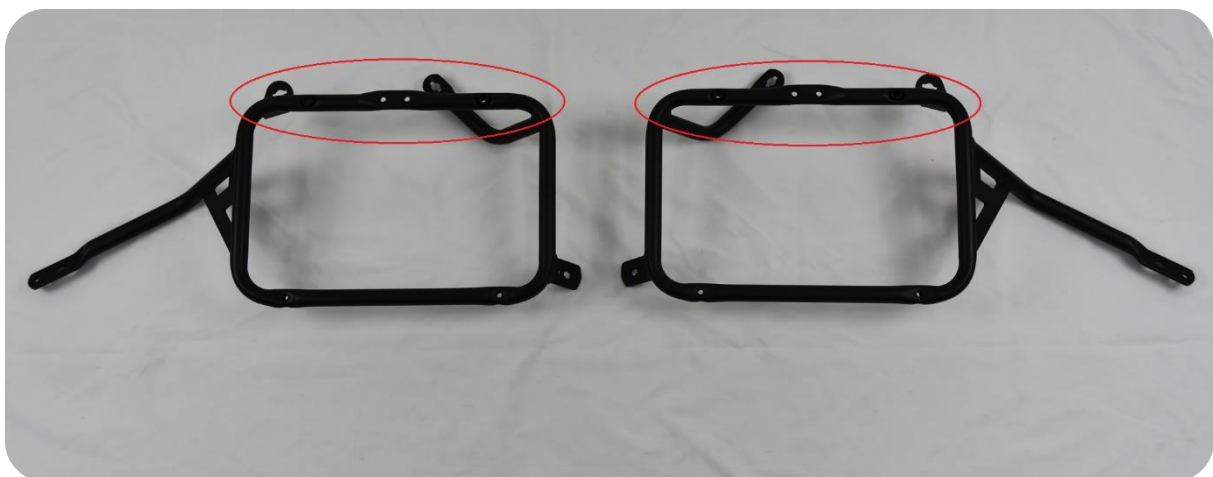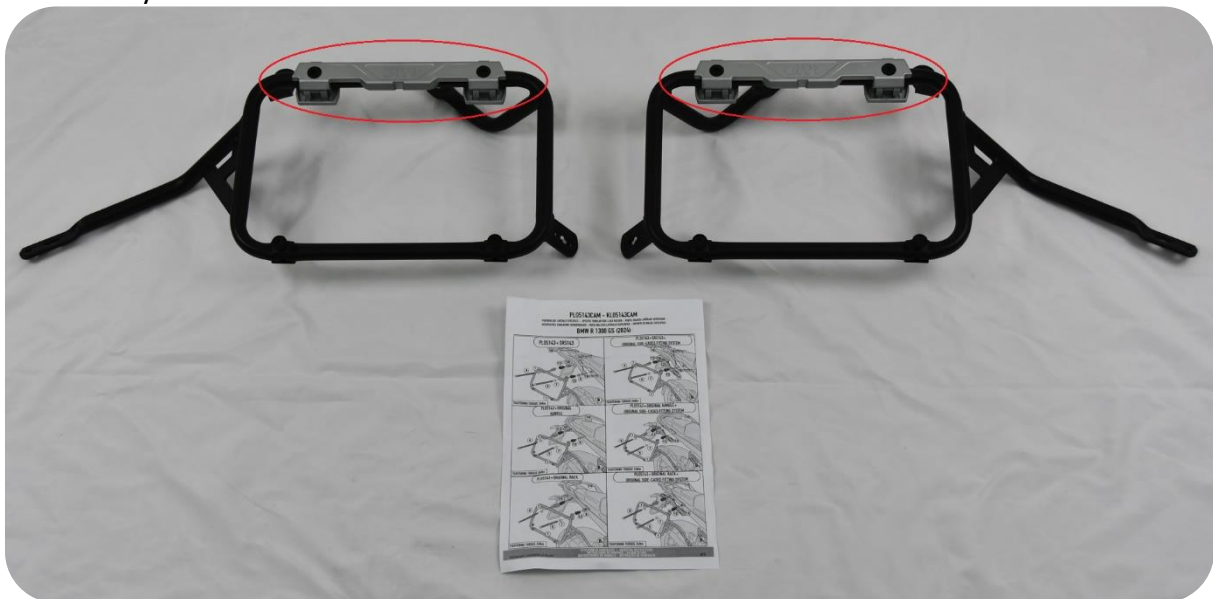

Schritt 2:

Die bei den FC-Moto Koffern mitgelieferten GIVI Adapter Typ B links & rechts werden nun mit dem beiliegenden Montagematerial auf den GIVI Seitenkofferträgern montiert.

Bitte beachten: Je nach Trägermodell müssen die originalen Schrauben und Muttern verwendet werden.

**Hinweis:**

Bei 36 L Koffern wird ein langer Schließbügel an GIVI Adapter Typ B benötigt und für 28 L ein kurzer.




Schritt 3:

Die GIVI Seitenkofferträger mit den montierten GIVI Adaptern wieder ans Fahrzeug montieren und anschließend FC-Moto Koffer an Trägern befestigen.



Montage in einem Bild gezeigt:

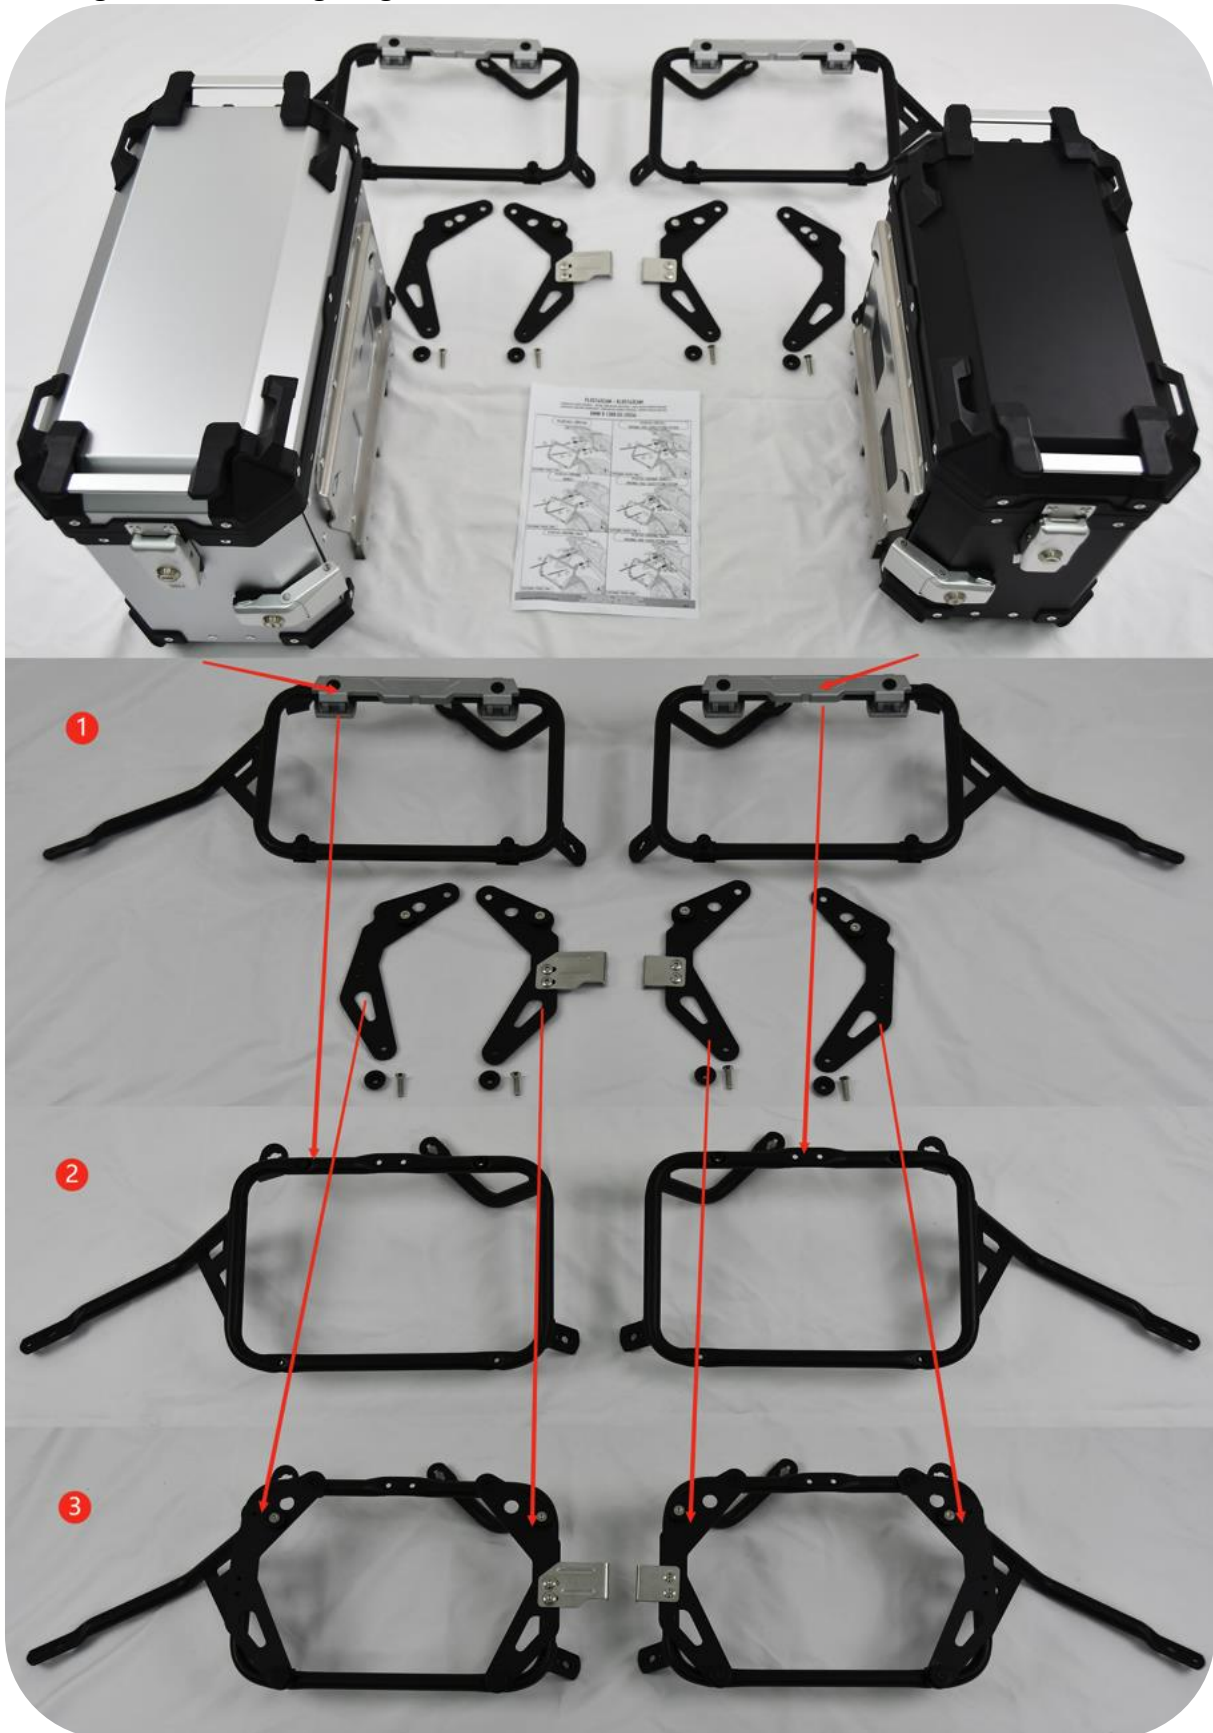

Montageanleitung/Mounting instructions (german and english)



FC-Moto Side Cases Set – Mounting with GIVI adapter type B to GIVI Side Case Carrier

Delivered: FC-Moto side cases left & right with enclosed GIVI adapters type B left & right for mounting on the mounting points of the FC-Moto side cases.

To mount the FC-Moto cases to the existing GIVI PLOxxxxCAM side carrier system, please pay attention to the following steps:

Step 1:


If necessary, remove the side case carrier from the motorcycle and remove the marked GIVI click system.

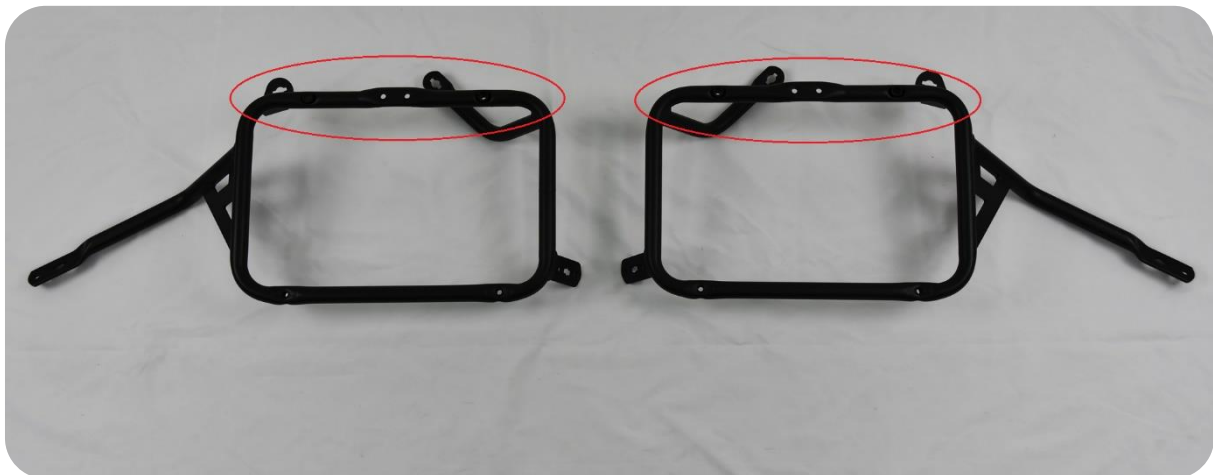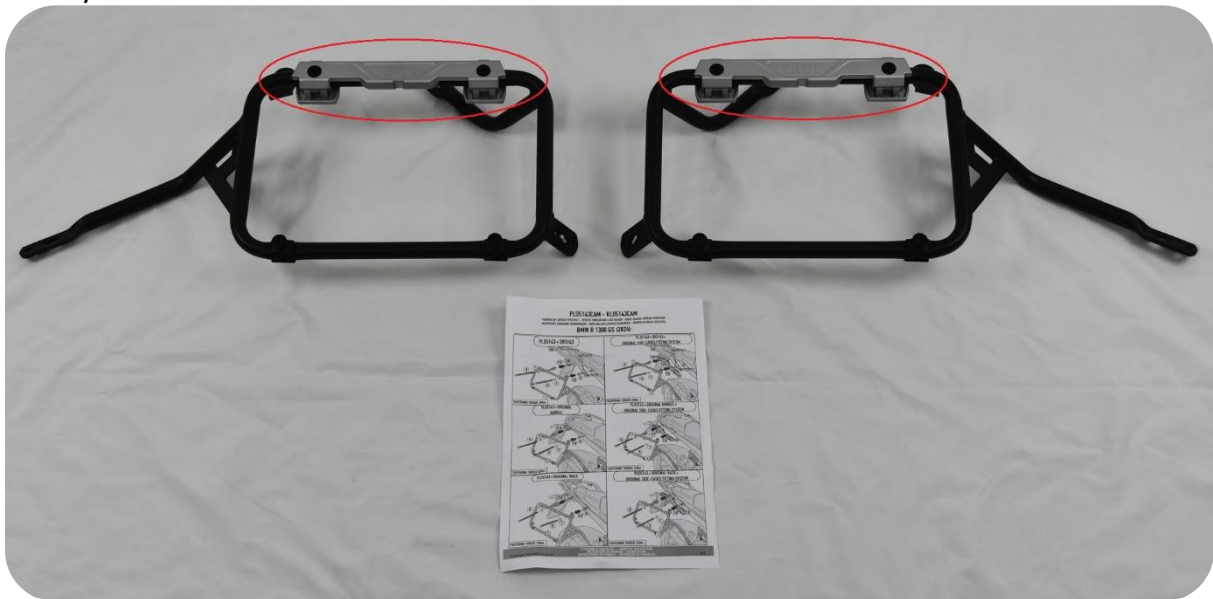

Step 2:

The GIVI adapters type B left & right supplied with the FC-Moto cases are now mounted on the GIVI side case carriers using the enclosed mounting material.

Please note: Depending on the carrier model, the original bolts and nuts must be used.

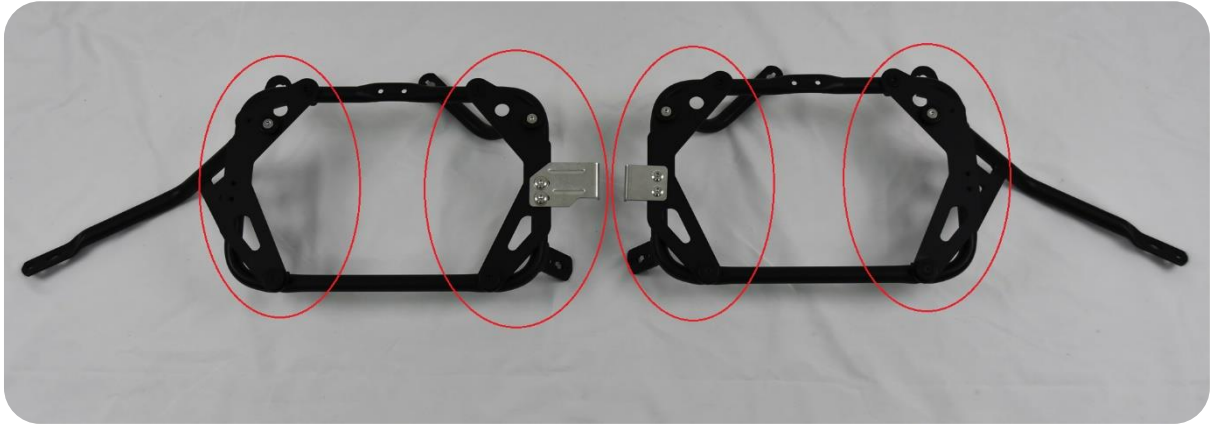**Note:**

For 36 L cases a long locking bracket is required on GIVI adapter type B and for 28 L a short one.



Step 3:

Remount the GIVI side case carriers to the vehicle with the fitted GIVI adapters and then attach the FC-Moto cases to the carriers.



Mounting shown in one picture:

